




PRIMER

Balun

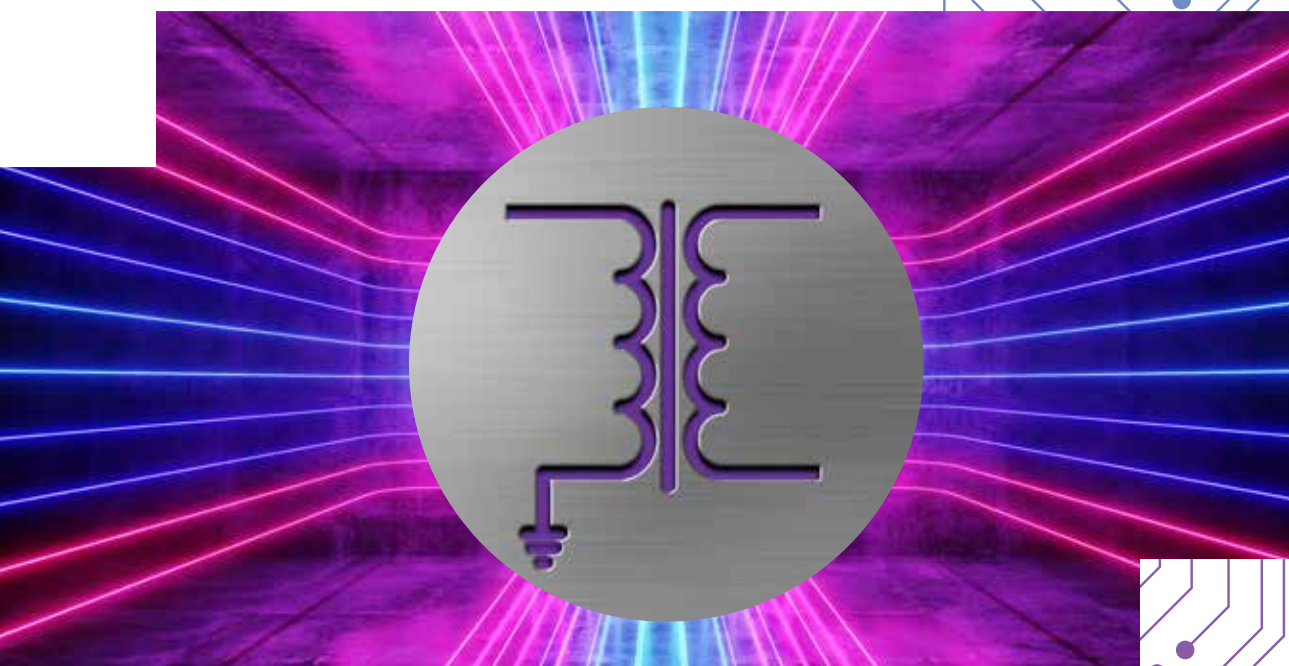

By: Doug Jorgesen and Christopher Marki

May 2014

Edited by: Del Pierson, July 2026

The balun has a long and illustrious history, first documented in literature as a device to feed the television transmitting antenna for the Empire State Building in 1939.¹ Since then, designs have matured dramatically and applications have evolved beyond driving differential antennas to include balanced mixers, amplifiers, and signal lines of all types. Baluns have long been ubiquitous in low frequency audio, video, and antenna driving applications. The need for high speed, low noise data transfer has driven the advancement of the balun to higher frequencies and superior performance.

Despite these advancements, information about baluns remains scattered and confusing; this primer seeks to resolve this problem by clarifying the basic characteristics of baluns, beginning with the definition, operation, and differentiation of baluns. Next, the primer will define different generic balun specs along with different balun types and their properties. Finally, the paper will address the applications of baluns and how to determine which balun is best for which application.

I. WHAT IS A BALUN?

A balun is any three port device with a matched input and differential outputs, as demonstrated in **Figure 1**. It is most succinctly described by the required (ideal) S-parameters shown in **Equation 1**.

$$S_{12} = -S_{13} = S_{21} = -S_{31}$$

1)

$$S_{11} = -\infty$$

Note what is implied by this:

- A balun is a three-port power splitter, similar to a Wilkinson or resistive power divider.
- The two outputs will be equal and opposite.
 - In the frequency domain, the outputs have a 180° phase shift.
 - In the time domain, the voltage of one balanced output is the negative of the other balanced output.
- The unbalanced input is matched to the input transmission line impedance (usually 50 Ω).
- Unlike an isolator or circulator, a balun is a reciprocal device that can be used bidirectionally.

Also note what is not implied by this:

- The two outputs are not necessarily matched.
- The outputs of the balun may or may not be the same impedance as the input.
- There is no constraint on S_{23} , so the outputs may or may not have isolation.
- Therefore, there may be a different return loss on the outputs for differential and common mode signals.

¹ N.E. Lindenblad, "Television transmitting antenna for Empire State Building," RCA Rev., vol. 3, pp. 387-408, April 1939.

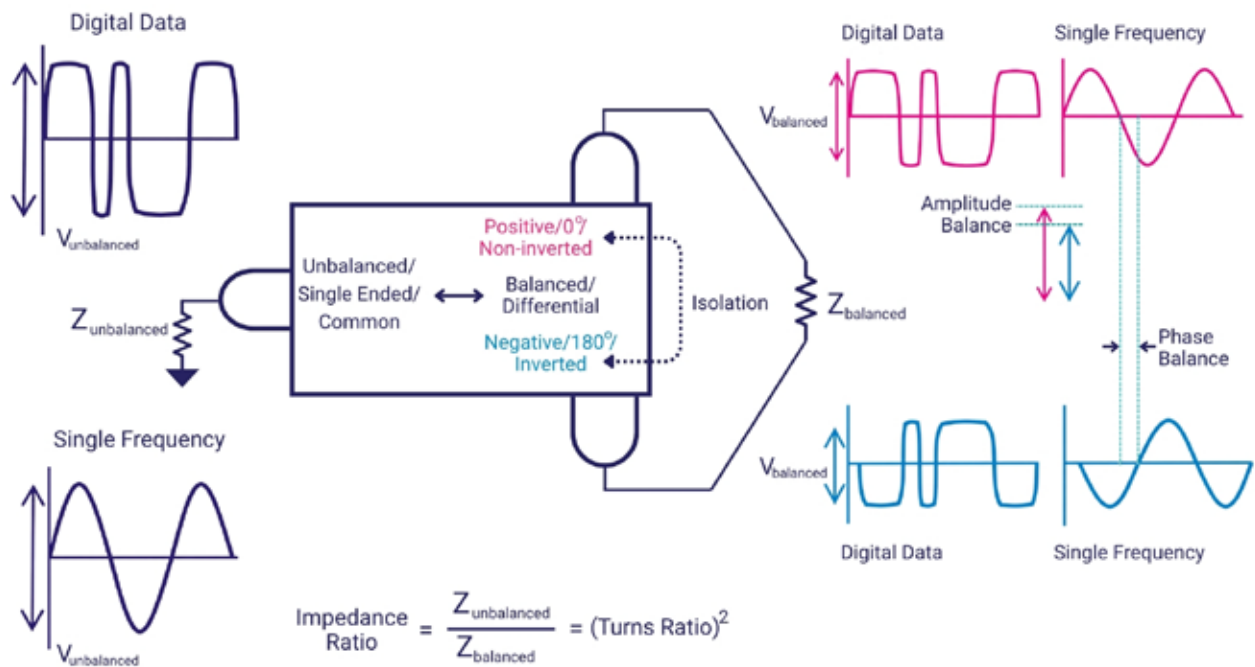


Fig. 1: Baluns convert between balanced and unbalanced signals.

The term balun is a portmanteau of balanced and unbalanced, indicating that a balun will transition between a balanced (also called 'differential') transmission line (where opposite currents both travel in transmission lines) and an unbalanced (also called 'single ended') transmission line (where the return current travels in the ground). However, this description obscures the simplicity of the balun. A balun has equal power outputs just like a Wilkinson power divider, resistive power divider, or quadrature hybrid coupler. However, it has a 180° phase difference between outputs, while power dividers have a 0° phase difference and quad hybrids have a 90° phase difference between outputs.

At low frequencies, the terms balun and transformer are often used interchangeably because low frequency baluns are almost always implemented using flux coupled transformers. For this reason, it is often said that a balun is a type of transformer; however, it is more accurate to say that a transformer can sometimes be used as a balun. Many other structures can also be used to implement balun functionality, as discussed in Section IV. Before discussing the virtues of different types of balun structures, it is important to understand what performance metrics are important for baluns.

II. BALUN PERFORMANCE SPECS

A. Frequency Coverage

As with all RF/microwave circuits, each performance metric is only valid across some specified bandwidth. Increasing the bandwidth from octave, to decade, to multi-decade without sacrificing performance is a major challenge. In general, Marki Microwave baluns can be divided into three types. Those with only magnetic coupling perform below 10 MHz, while those with only capacitive coupling have low end performance limited to about 1 GHz but can operate up to mmWave frequencies. Baluns made with a combination of magnetic and capacitive coupling can operate from below 1 MHz to V-band

frequencies. For example, Marki's [BAL-0067](#) operates from 300 kHz to 67 GHz, providing an extremely broadband frequency range. This primer elaborates on this topic in Section III. Types of Baluns.

B. Phase Balance

The most important performance criterion is how close the balanced outputs are to having equal power and 180° phase, called phase balance. Phase balance is the measure of how closely the inverted output is to 180° out of phase with the non-inverted output, usually measured in degrees. It is the most critical parameter for many balun applications. In addition to the quality of the balun structure, the matched lengths of the output lines determine the balance. Typical phase balance for standard microwave baluns is $\pm 15^\circ$ max and $\pm 10^\circ$ typical, while high performance Marki baluns approach $\pm 5^\circ$ max and $\pm 1^\circ$ typical. Marki offers multiple baluns with phase balance below 1° , including the [MBAL-0260](#) from 2 to 60 GHz and the [MBALH-0R106](#) from 0.1 to 6 GHz, each with 0.4° typical phase balance.

C. Amplitude Balance

Related to phase balance, amplitude balance is also determined by construction and line matching. Although it is called amplitude balance, it is usually specified in dB and specifies the match between output power magnitude. Low performance baluns have amplitude balances of ± 1.5 dB max and ± 1 dB typical, while Marki products approach ± 0.5 dB max and ± 0.1 dB typical. Marki offers the [MBAL-0104](#), a balun with an amplitude balance of 0 dB typical, 0.5 dB max, specifically designed for clock distribution and higher order Nyquist sampling in ADCs.

D. Common Mode Rejection Ratio

If two identical signals with identical phase are injected into the balanced ports of the balun (called 'common mode' or 'even mode' signals), they will be either reflected or absorbed. The amount of attenuation this signal will experience from the balanced to unbalanced port is called common mode rejection ratio (CMRR) and is expressed in dB. It is determined by the vectorial addition of the two signals and is therefore dependent on the amplitude and phase balance of the balun. The relationship between amplitude balance, phase balance, and CMRR is shown in **Figure 2**. As a rule of thumb, a 0.1 dB improvement in amplitude balance will improve the CMRR by the same amount as a 1° improvement in phase balance. A low performance balun will have 15 to 20 dB of CMRR, while many Marki baluns achieve up to 45 dB of CMRR.

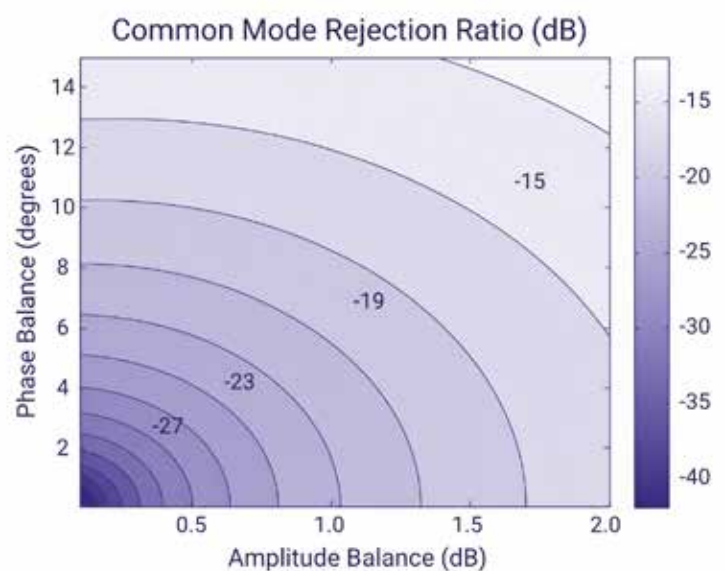


Fig. 2: Common mode rejection ratio as a function of amplitude balance and phase balance.

E. Impedance Ratio/Turns Ratio

While the unbalanced impedance of a balun is matched to the input transmission line, the balanced impedance can be any value. The ratio of the unbalanced impedance to the balanced impedance is the impedance ratio and is usually stated as a 1:n ratio (i.e. 1:1, 1:2, 1:4).² Note that the differential impedance is between the balanced signal lines. This is twice the impedance between the signals and ground. A related value is the turns ratio, which for a flux coupled balun transformer is the ratio of primary windings to secondary windings. The impedance ratio is the square of the turns ratio (i.e. a 1:2 turn ratio gives a 1:4 impedance ratio). A higher output impedance will provide increased voltage at a reduced current, which is desirable for matching into high impedance semiconductor devices. High impedance ratio baluns are easy to design using flux coupled transformers, but much more difficult for transmission line transformers and other high frequency constructions. Marki offers two families of impedance ratio baluns, the (M)BAL- and (M)BALH-. BAL baluns are 1:2 baluns, translating to an unbalanced impedance of 50 Ω and balanced impedance of 100 Ω differential/ 50 Ω single-ended. BALH baluns also have an unbalanced impedance of 50 Ω , but a balanced impedance of 50 Ω differential/25 Ω single-ended.²

F. Insertion and Return Loss

A lower insertion loss and higher return loss translates to more power available for downstream functions, an improved dynamic range, and less distortion of signals in previous stages of the system. In a balun without isolation, as in a reactive splitter, the return loss of balanced ports will be different for common mode and differential mode signals. In an ideal balun without isolation, the common mode signal would be perfectly reflected, with a return loss of 0 dB, while the differential signal would pass through completely with a return loss of $-\infty$. To properly characterize this effect, engineers can use mixed-mode S-parameters instead of standard S-parameters to determine how the device will operate with differential inputs.³

G. Balanced Port Isolation

Usually referred to simply as isolation, this has the same meaning as in other power dividers and couplers, namely the insertion loss from one balanced port to the other, measured in dB. Most baluns do not offer high isolation because the even mode is reflected instead of being properly terminated with a resistive load. The exception is 180° hybrid circuits, where the even mode is output to a port that can be resistively terminated.

H. DC/Ground Isolation

Different from the balanced port isolation, DC isolation is whether the unbalanced port has a DC connection to one of the balanced ports. Ground isolation is whether there is a connection between the unbalanced ground and the balanced signals or grounds.

² For more information, see [“MBAL vs. MBALH Data”, Marki Microwave Application Notes](#).

³ Bockelman, D.E., Eisenstadt, W.R., “Combined differential and common-mode scattering parameters: theory and simulation”, Microwave Theory and Techniques, vol. 43, no. 7, 1995, pp. 1530-1539.

I. Group Delay Flatness

For data transmission applications, a flat group delay will ensure a minimal amount of distortion. Group delay flatness is the difference from the average delay across frequencies. This parameter can most easily be evaluated by either measuring directly on a VNA or examining the output eye diagrams from an input amplitude shift keyed signal. Unwanted group delay ripple is related to poor broadband matching. Baluns with superior return loss will have superior group delay flatness.

III. TYPES OF BALUNS

The most common type of balun by volume is the flux coupled balun transformer. This balun is created by winding two separate wires around a magnetic core (the same as any transformer) and grounding one side of the primary winding. This creates an unbalanced condition on the primary side, and a balanced condition on the secondary side. In addition, the secondary side can have an arbitrary ratio of turns to the primary side, creating an arbitrary impedance ratio (the theory of a transformer is explained in many introductory electrical engineering texts).

The flux coupled balun transformer will induce an AC voltage in the secondary of n times the voltage in the primary, while the current will be n times smaller than in the primary, giving an output impedance of n^2 as stated above, where n is the ratio of turns in the secondary to turns in the primary. The circuit symbols typically used for a balun transformer are shown in **Figure 3**. Circuit diagrams typically use a dot convention to indicate which side corresponds to the input polarity. Wire wound flux coupled transformers will often have a center tap in the secondary winding. In the middle of the secondary winding, a virtual ground exists, and connecting this point to the ground of the secondary system can improve the balance of the output.

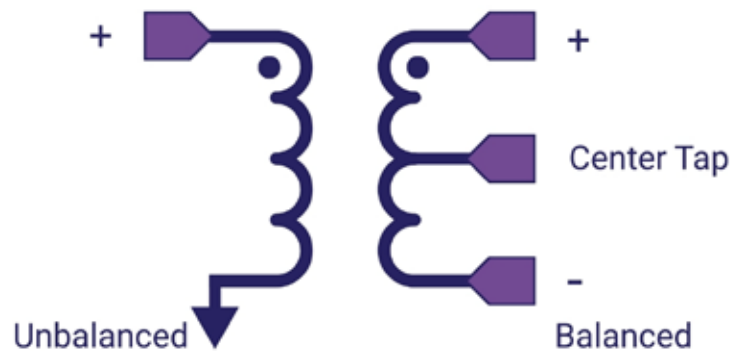


Fig. 3: Circuit symbol for a flux coupled balun transformer, showing the dot convention and center tap.

Ideally, a flux coupled transformer (**Figure 4a**) could be used whenever balun functionality is required. Flux coupled transformers are well understood, relatively simple to build, provide an arbitrary impedance ratio that can be easily tuned, and provide both DC and ground isolation. Unfortunately, they are generally limited to frequencies below 1 GHz. At higher frequencies, the dipoles in the magnetic material cannot switch fast enough, and the balun loses coupling. The parasitic capacitance between

wires causes high frequency signals to travel directly to ground without coupling through the magnetic material. Additionally, magnetic materials always possess a large loss tangent, leading to high signal losses at microwave frequencies.

Because of these difficulties, the capacitively coupled transmission line balun (**Figure 4b**) was developed. This is a set of coupled lines with one end grounded, such that the coupling will induce equal and opposite signals in both lines. Converting the ground to a transmission line allows the signal to be used differentially. This can be done in many ways, most often with a bifilar transmission line wrapped around a magnetic core to take advantage of the low frequency magnetic coupling as well as the high frequency capacitive coupling (**Figure 4c**). This basic structure can be connected in multiple ways; the more common forms include the 1:4 impedance ratio Ruthroff balun and 1:4 Guanella balun, as demonstrated in **Figure 5**.⁴

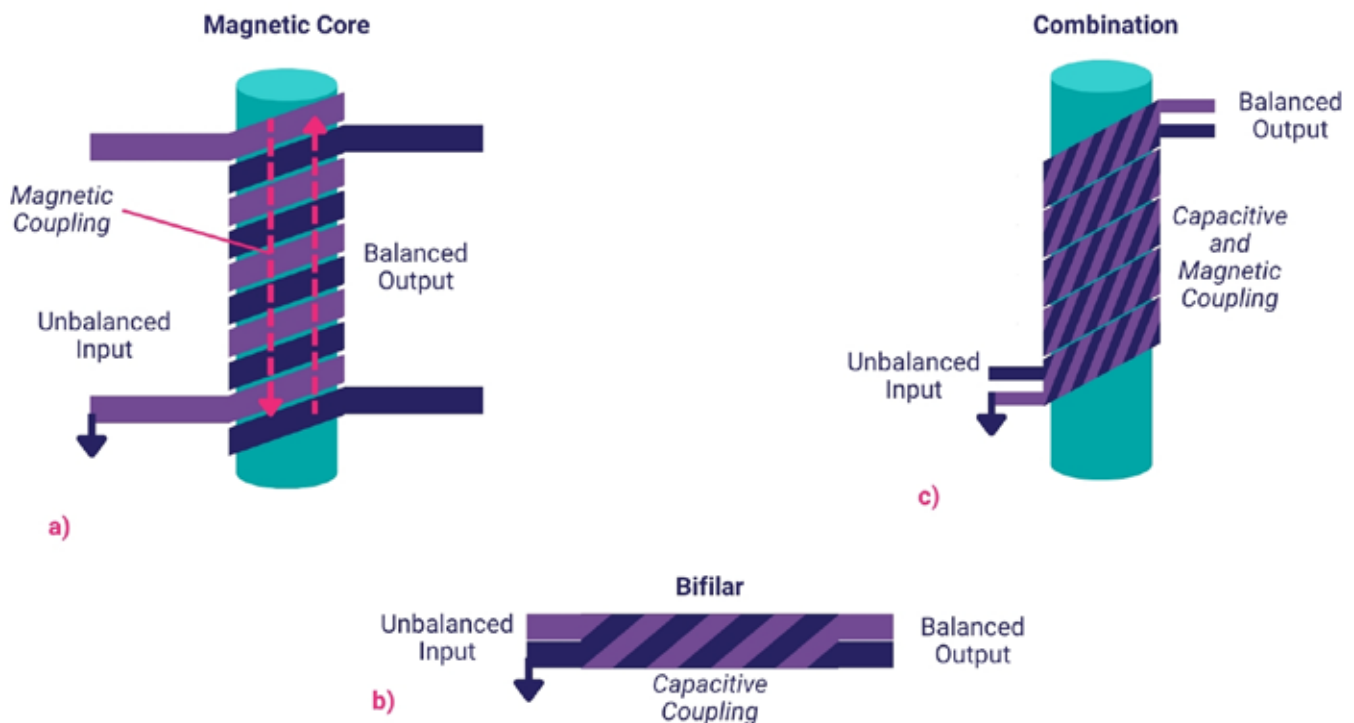


Fig. 4: Construction of a) a flux coupled balun transformer using two wires wrapped around a magnetic core, b) a transmission line balun consisting of a bifilar coil of two wires wound around each other, with one end connected to ground, and c) a transmission line balun transformer using a magnetic core for additional low frequency coupling.

⁴ Gustav Guanella (1909-1982) was a brilliant Swiss inventor and manager with over 200 patents. He developed the basic transmission line balun, and the one that bears his name, to match a high impedance power amplifier to a low impedance antenna. Clyde Ruthroff was a scientist at Bell Labs from 1946-1977. In his paper, 'Some Broad-Band Transformers', he actually proposes 9 different transformers that became the basis of hundreds of variations. This primer shows only one.

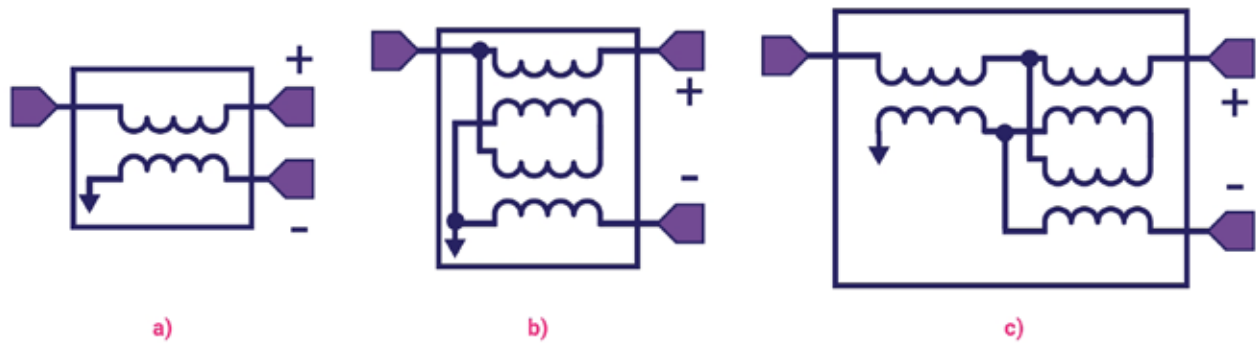


Fig. 5: Circuits diagrams of a) a 1:1 transmission line balun, b) a 1:4 Guanella balun, and c) an example of a 1:4 Ruthroff balun.

This functionality can also be performed with a microstrip transmission line, where the ground plane is simply tapered into a bottom transmission line. This structure, called a tapered balun (also called microstrip-to-balanced stripline balun, (**Figure 6**), has the advantage of high frequency operation but the disadvantages of no low frequency capability and a difficult-to-implement geometry. The tapered balun, in turn, is very similar to other types of coupled line baluns such as the Marchand balun (**Figure 7**), coplanar waveguide balun, coaxial balun, planar transformer (spiral) balun, and more.

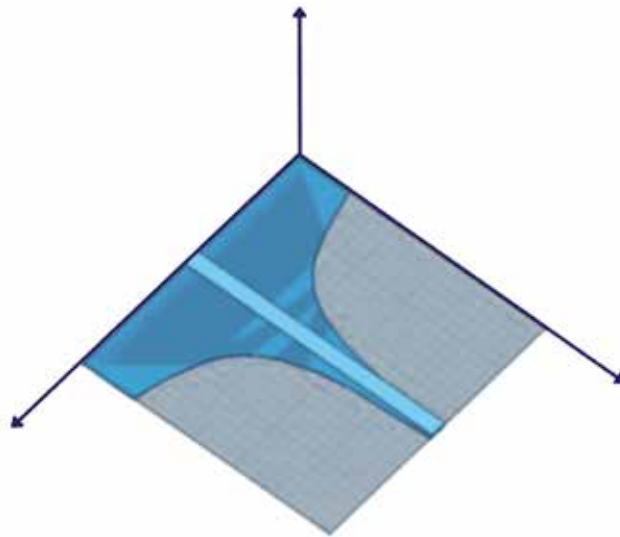


Fig. 6: Rendering of a tapered microstrip balun.

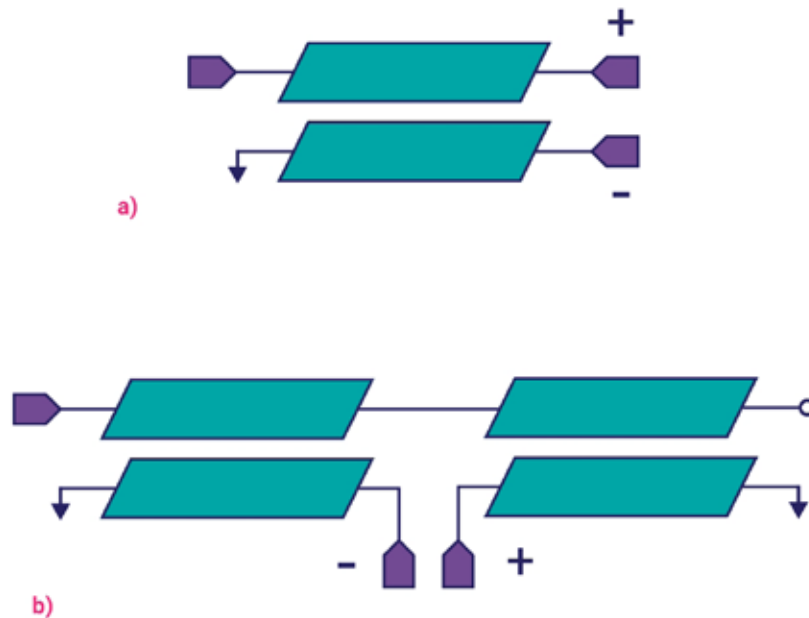


Fig. 7: Circuit diagram of a) a capacitively coupled transmission line balun and b) a basic Marchand balun.

These types of baluns are all based on quarter wavelength sections of transmission lines, which means they need to be longer (and higher loss) to operate at lower frequencies. This limits the practical low end of the frequency band to around 500 MHz to 1 GHz. On low dielectric substrates, the parts will be larger (and usually lower loss), while on higher dielectric substrates they will be smaller (and higher loss). For example, a quarter wavelength section at 1 GHz on a 2.2 dielectric substrate will be 2.15" long. Therefore, the minimum length of a Marchand balun would be 4.3" long. Conversely at 10 GHz, the same balun would be 0.430" long and easily printed using standard fabrication methods.

All the previously mentioned baluns are of a similar design, where coupling of some sort is used to float the ground of an unbalanced transmission line, creating a balanced transmission line. Another type of balun is one where an in-phase power division is performed first, and then a 180° phase shift is applied to one of the outputs, creating a balanced output (Figure 8). This structure is not to be confused with the 180° power divider, which is discussed below. This phase shift can be narrow band, such as a half wave transmission line, or a broadband phase shift such as an inverter. This technique is commonly used to create higher frequency baluns for test and measurement. A half-wave balun uses a ladder of quarter wave transformers combined with half wave transmission sections to expand the bandwidth of a simple single frequency balun. Another method is to use a coupler with a 90° phase shift on one arm and a coupler with a -90° phase shift on the other arm. These baluns can achieve multi-octave bandwidths if they use interdigital Lange couplers.


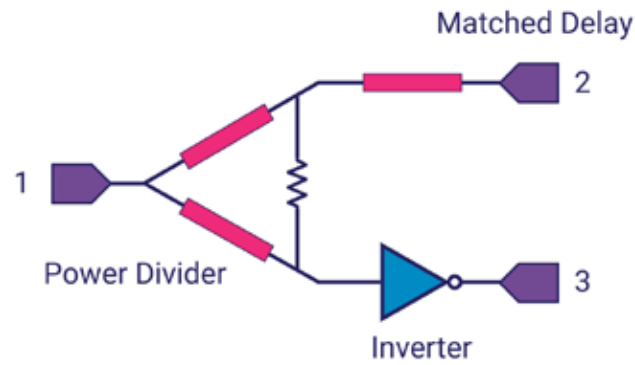


Fig. 8: Block diagram of a phase shift balun.

The final type of balun is the 180° power divider, which is a balun with isolation between the outputs. These are implemented using 180° hybrid junctions (Figure 9). These are similar in function to 90° hybrid couplers, but they have a phase shift of 180° between the non-isolated ports. From two inputs, the common or even mode will output from one port (the Σ or sum port), while the differential or odd mode will appear at a different port (the Δ or difference port). A 180° hybrid coupler can be made into a 180° power divider by terminating the sum port with a $50\ \Omega$ load. These types of circuits suffer from the same quarter wavelength length requirements as capacitively coupled baluns. Common examples of 180° hybrid couplers include the rat race coupler, the asymmetric tapered coupled line coupler, and the magic-T (Figure 10). Interestingly, a Wilkinson power divider is a type of 180° hybrid where the sum port is terminated with a lumped resistor, called the isolation resistor. Table 1 shows the different types of baluns and their attributes.

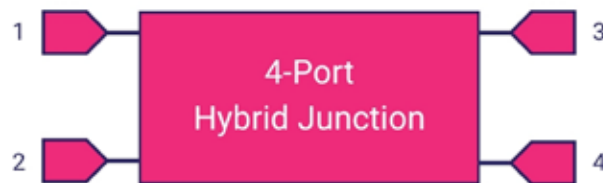

Port 1	Port 2	Port 3	Port 4
Input	Isolated	Input/2	Input/2
Isolated	Input	Input/2	-Input/2

Fig. 9: a) Schematic and b) I/O table for a four-port hybrid junction.

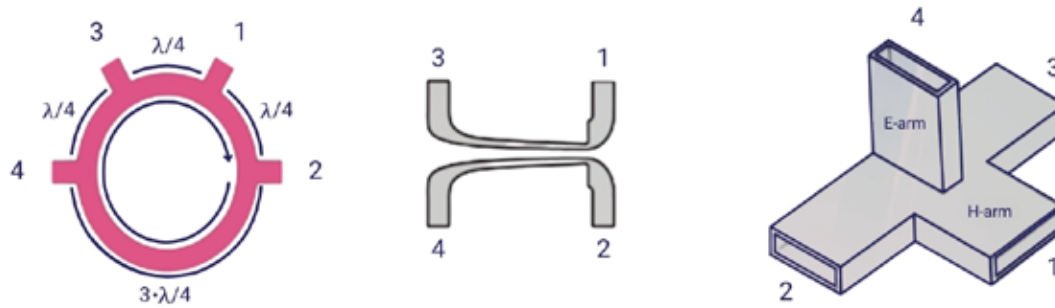


Fig. 10: Schematic of a) a rat race coupler, b) an asymmetric tandem coupler, and c) a waveguide Magic-T.

Balun Types and Their Attributes						
Balun Type	Max BW Ratio	Practical Frequency Range	Balance	Isolation	Common Impedance Ratios	Applications
Flux Coupled Balun Transformer	$10^6:1$	20 Hz to 1 GHz	Fair to excellent	With center tap	Arbitrary	Balanced transmission lines, differential antennas
Wire-wound Transmission Line Balun	$10^5:1$	500 kHz to 10 GHz	Fair to excellent	No	1:1, 1:4	Interface to differential ICs (ADCs/DACs)
Capacitively Coupled Transmission Line Balun	$10^2:1$	0.5 to 65 GHz	Fair to excellent	No	1:2	Balanced mixers, push-pull amplifiers, signal combining
Power Divider- Inverter Balun	$10^6:1$	200 kHz to 65 GHz	Fair	Depends on power divider	1:2	Test instruments
Half Wave Balun	$<2:1$	0.5 to 60 GHz	Good	No	1:2	Mixers
Rat Race Coupler	$<2:1$	0.5 to 50 GHz	Fair	Yes	1:2	Mixers, duplexers
Asymmetric Tandem Coupler	10:1	0.5 to 40 GHz	Fair	Yes	1:2	Mixers, duplexers, amplifiers, antenna arrays
Waveguide Magic T	$<2:1$	1 to 146 GHz	Fair	Yes	1:2	Mixers, duplexers, amplifiers

Table 1: Summary of different balun types and their attributes.

IV. APPLICATIONS OF BALUNS

The most common application of baluns is to interface an unbalanced signal to a balanced transmission line for long distance communications. Differential signaling on balanced transmission lines is more immune to noise and crosstalk, can use lower voltages, and is lower cost than single-ended signaling on coaxial cables. Hence, it is used for common intermediate and long-distance transmission lines such as RS-422, RS-485, Ethernet over twisted pair, PCI Express, DisplayPort, HDMI, and USB. Therefore, baluns are used to interface local video, audio, and digital signals to long distance transmission lines. In these applications, the most important characteristic is common mode rejection ratio. The second most important application of baluns is for driving differential antennas. There is an abundance of literature from amateur ham radio operators on techniques to build and operate baluns for various antenna patterns to maximize the antenna gain.⁵ As in differential signaling, the rejection of common mode current is the most important metric for an antenna feed balun, although performance also requires proper impedance ratios and matching to the antenna.

Another extremely high-volume application is the use of baluns to create balanced devices such as push-pull amplifiers and balanced mixers. Push-pull amplifiers work by splitting the signal into a positive and negative version with a balun, amplifying them, and then recombining the signals with another balun (**Figure 11a**). One advantage of this scheme is that the saturated output power can be doubled. Alternatively, the input power to each amplifier can be reduced by half for a given output power, significantly reducing the distortion products created by higher input powers. Another benefit is that this scheme will dramatically reduce, by the baluns' CMRR, the second order distortion outputs of the amplifier. The second order and all other even order distortion products will be identical in both amplifiers, while the fundamental will be out of phase. Therefore, all even order products will be canceled in the output balun, while the odd order products pass through.

It is this even product cancellation that can be used to dramatically reduce spurious products in balanced mixers, like the double balanced mixer shown in **Figure 11b**. In this structure, not only are the even order distortion products of both the RF and LO canceled out, but the fundamental of the LO will also be canceled out traveling to the RF and IF ports. Marki Microwave has been using this technique to design mixers for many decades. Owing to vast experience designing baluns for mixer applications, Marki Microwave offers discrete baluns to meet the most demanding requirements.

⁵ Most important is Jerry Sevick, who spent his career working on antennas at Bell Labs. He also coined the term 'unun' to describe an unbalanced to unbalanced impedance transformer. See Jerry Sevick, W2FMI, Understanding, Building, and Using Baluns and Ununs, CQ Communications, 2003.

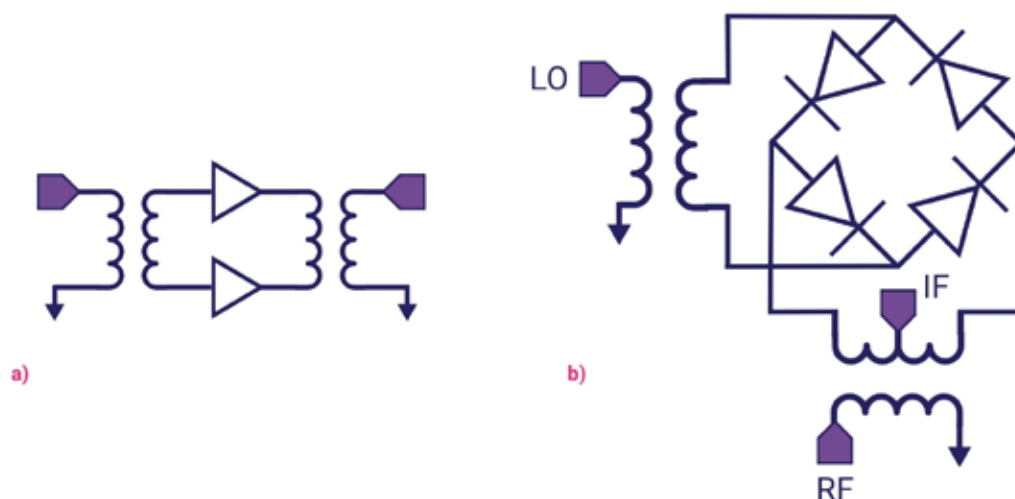


Fig. 11: Block diagram of a) a push-pull amplifier and b) a double balanced mixer.

Marki offers high performance connectorized, surface mount, and bare die baluns. Connectorized baluns are typically used for interfacing high speed differential chips to unbalanced signals, either from test equipment or receivers, for testing purposes. These units allow single ended test equipment such as synthesizers, oscilloscopes, power meters, and network analyzers to interface with differential devices such as cables, differential amplifiers, receivers, and transmitters. This is very important for differential devices, since they will generally behave quite differently when excited with a differential signal versus when they are excited with a single ended signal (which can be decomposed into both differential and common mode signals). In particular, a 2-port VNA can be used to measure differential devices with a matched set of baluns, but special care must be taken to de-embed the baluns if they do not have isolation.⁶

Marki Microwave's broadband, high performance surface mount baluns are most frequently used as the interface between high-speed digital converters and heterodyne transmission systems. In this circumstance, designers are replacing what was previously the final IF transmission stage for these heterodyne converters. In this application, the most important specification for the balun is the phase balance. An improvement from 12 degrees of phase balance to 3 degrees of phase balance can improve the even order dynamic range of an analog-to-digital converter (ADC) by more than 10 dB.^{7,8}

⁶ For more information see [“The Problem with Back to Back Baluns”, Marki Microwave Application Notes](#), and [“The Solution to Back to Back Baluns”, Marki Microwave Application Notes](#).

⁷ For more information see [“Why buy a high quality balun/transformer for an analog to digital converter \(ADC\)?”, Marki Microwave Application Notes](#).

⁸ See Rob Reeder, [“Wideband A/D Converter Front-End Design Considerations: When to Use a Double Transformer Configuration”](#).

Matching a wideband ADC to a single ended source is a difficult challenge, especially when using super-Nyquist sampling (at frequencies above the fundamental Nyquist zone). A differential amplifier at the front end will add noise and degrade linearity, while a balun will provide voltage gain without adding noise (an ADC responds to voltage, which will be $\sqrt{2}$ higher or more depending on the impedance ratio at the differential outputs of a balun). The input impedance of an ADC is typically much higher than $50\ \Omega$, generally in the $k\Omega$ range. Thus, a higher output impedance balun will generally match better to an ADC input than a 1:1 balun.

An example of an ADC matching circuit is shown in **Figure 12**. It involves AC coupling capacitors, parallel resistors, and inductance to match the capacitive, high impedance ADC load to the transmission line input. It also includes series resistors to limit any amount of charge injection coming from the ADC's internal sampling structure back into the analog system. Due to the band-limiting nature of the ADC, it is often necessary to use a balun that is much wider band in a pure $50\ \Omega$ system than the required system bandwidth.

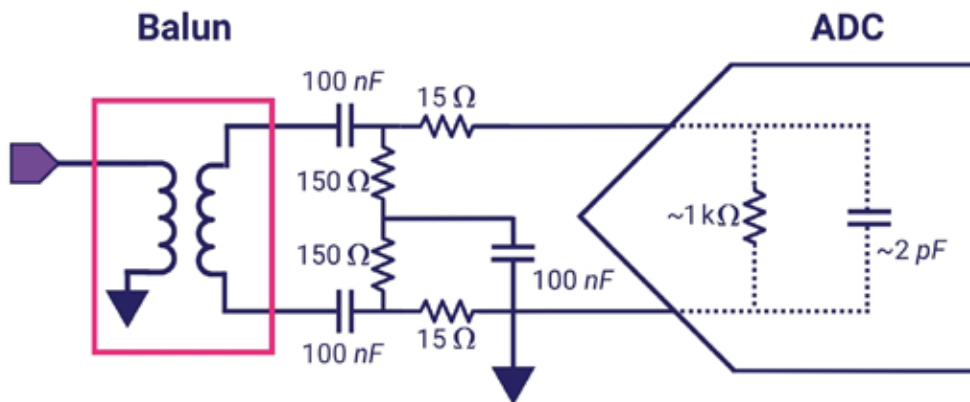


Fig. 12: Schematic of an ADC matching circuit using a balun.

V. SUMMARY

The term 'balun' encompasses a wide range of devices and applications; however, baluns are ultimately differential power dividers. They can be built as transformers, capacitively and/or magnetically coupled transmission lines, hybrid couplers, or as a combination of a power divider and an inverter. Their most important characteristic is how well balanced they are in power, and how close to 180° out of phase their balanced ports are. Baluns can be used for many applications to transition between single ended and differential signals and to cancel common mode noise and signals. The future of baluns lies in further improving the balance, increasing the power handling, and reducing the size, complexity, and cost in these critical communications applications.

© 2026. Marki Microwave, LLC. All Rights Reserved. MARKI MICROWAVE, M wave logo, FastSwitch, and T3 MIXER are trademarks or registered trademarks of Marki Microwave, LLC. All other trademarks used are the property of their respective owners.

MARKI MICROWAVE, LLC, ("MARKI") PROVIDES TECHNICAL SPECIFICATIONS AND DATA, APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, AND OTHER INFORMATION AND RESOURCES "AS IS" AND WITH ALL FAULTS. MARKI DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT.

These resources are intended for developers skilled in the art designing with Marki products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards and other requirements. Marki makes no guarantee regarding the suitability of its products for any particular purpose, nor does Marki assume any liability whatsoever arising out of your use or application of any Marki product. Marki reserves the right to make changes to its product(s) or information described herein without notice.